

## MX1000II/MX1500II/MX2000II/MX2500II

### Professional Stereo Conference Amplifier (2×150W/230W/300W/400W)



## Description

The MX1000II MX1500II MX2000II MX2500II series is a range of professional two-channel stereo power amplifiers that offer a high-power output and individual volume control for each channel. With flexible input options, LED working status indication and various protection features, this series is great for large events and sound reinforcement in different occasions.

## Features


- Professional two-channel stereo power amplifier
- New design, standard chassis, suitable for standard cabinet installation
- A series of high-power amplifier arbitrary choice to meet the different needs
- Dual channel, mono and BTL bridge three output options for the choice of output mode switch selection
- Individual volume control for each channel
- 4Ω minimum load impedance of stereo working, 8Ωload impedance the minimum of BTL working
- With XLR signal output interface, flexible and convenient to use
- The output of the power amplifier has common terminals and professional SPEAKON speaker sockets (stereo and bridge working modes only);
- With short circuit protection, DC protection, power off and a variety of protection and alarm functions

- Each channel is equipped with LED working status indication, low noise design
- Suitable for a variety of different occasions, language transmission and sound reinforcement.

## Specifications

Model	MX1000II	MX1500II	MX2000II	MX2500II
Rated Output / Per Channel, 8Ω	150W	230W	300W	400W
Rated Output / Per Channel, 4Ω	250W	350W	450W	700W
Rated Output / Bridge, 8Ω	500W	700W	900W	1400W
Input Sensitivity	600mV	700mV	800mV	1000mV
SNR	≥100dB			
Damping Coefficient/8Ω,1kHz	200:1			
Input Common-Mode Rejection	> 90dB			
Frequency Response	20Hz-20kHz (±3dB)			
Harmonic Distortion Factor4Ω/1kHz	< 0.1%			
Channel Impedance	4-16Ω			
Channel Crosstalk	<-70dB			
Voltage Gain	> 38dB			
Display	"POWER", "CLIP", "SIGNAL", "DC", "TEMP" and other LED indicators			
Power Supply	AC220V/50Hz			
Protection	Power Off, DC Output, Load Short Circuit			
Product Size (mm)	(L×W×H) 484×446×88 (2U)			
Package Size (mm)	(L×W×H) 535×530×195			
G/W	17.2 kg	18.8kg	23 kg	25.5 kg
N/W	15.2kg	16.8kg	21kg	23.5kg

## Front / Rear Panel

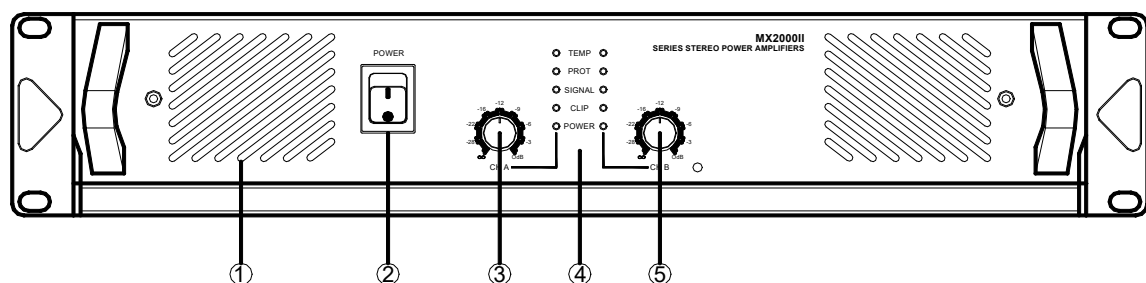


### ① Cooling Fan

The machine has cooling windows in left and right side respectively, in order to guarantee the good ventilation; do not block any of the ventilation when the machine is under operation.

### ② Power Switch

"I" for on, "O" for off.

- ③ Channel A volume control knob (Input attenuation)
- ④ Machine working status indicator:  
 TEMP: High temperature indicator, the indicator light when under high temperature protection  
 PROT: Protection indicator, DC output protection and short circuit protection, under the two protection indicator light  
 SIGNAL: Signal indicator, amplifier output instructions. This indicator lights when the amplifier has a signal output.  
 CLIP: Cutting the top of the distortion indicator, when the top of the distortion the indicator light. Please reduce the gain, to avoid long-term signal cutting to protect the amplifier and speaker equipment  
 POWER: Power indicator, channel A and channel B power indicator
- ⑤ Channel B volume control knob (input attenuation)

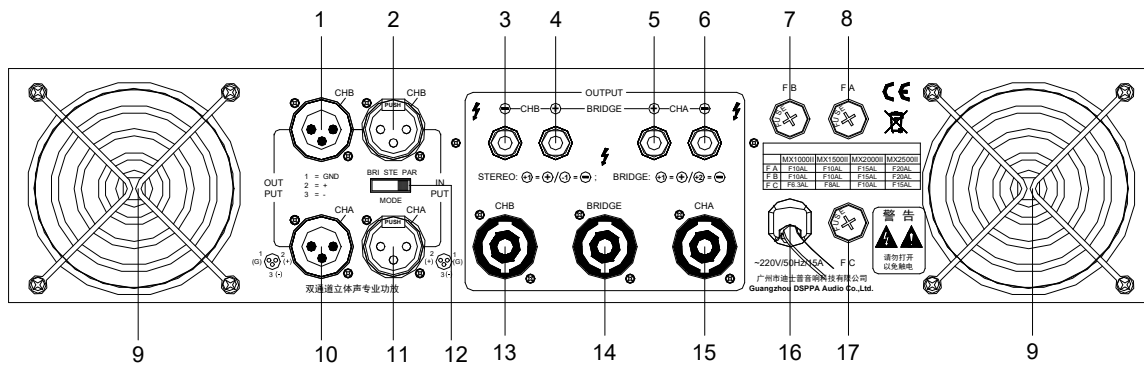

- ① Channel B line audio output three-core XLR interface (male)
- ② Channel B line audio input three-core XLR interface (female)
- ③ Channel B amplifier output "-" class terminal (connected to the speaker device "-" level)
- ④ Channel B amplifier output "+" class terminal (connected to the speaker device "+" level)
- ⑤ Channel A amplifier output "+" class terminal (connected to the speaker device "+" level)
- ⑥ Channel A amplifier output "-" class terminal (connected to the speaker device "-" level)
- ⑦ Channel B AC fuse  
 After the fuse is blown, replace it with the same specifications fuse. If the continuous fusing, then the machine internal failure, please remove the fault and then use the same specifications of the fuse to replace.
- ⑧ Channel A AC fuse  
 After the fuse is blown, replace it with the same specifications fuse. If the continuous fusing, then the machine internal failure, please remove the fault and then use the same specifications of the fuse to replace.
- ⑨ Cooling fan window  
 Do not block the cooling fan window under any circumstances.
- ⑩ Channel A line audio output three-core XLR interface (male)
- ⑪ Channel A line audio input three-core XLR interface (female)  
 Using standard XLR (female socket), the wiring method is: 1 pin: signal ground 2 pin: signal + 3 pin: signal -.
- ⑫ Power amplifier working mode selection switch  
 This machine has bridge output working mode, stereo working mode and input signal parallel working mode:  
 BRI: Channel A/B bridge working mode;  
 STE: Stereo working mode;  
 PAR: Input signal parallel working mode;

⑬ Channel B professional SPEAKON speaker socket

When the device works in stereo mode, the SPEAKON socket can be used for connection. The connection method is: +1 is connected to the positive terminal of the speaker; -1 is connected to the negative terminal of the speaker;

⑭ Channel A/B bridged professional SPEAKON speaker socket

When the device works in input signal parallel mode, the SPEAKON socket can be used for connection. The connection method is: +1 is connected to the positive terminal of the speaker; +2 is connected to the negative terminal of the speaker;

⑮ Channel A professional SPEAKON speaker socket

When the device works in stereo mode, the SPEAKON socket can be used for connection. The connection method is: +1 is connected to the positive terminal of the speaker; -1 is connected to the negative terminal of the speaker;

⑯ Local AC220V power input

If the power cable is damaged, please do not connect it to the mains power grid and repair it in time.

⑰ Local AC220V power input fuse holder

After the fuse is blown, replace it with the same specifications fuse. If the continuous fuse, then the machine internal failure, please remove the fault and then use the same specifications of the fuse to replace.